




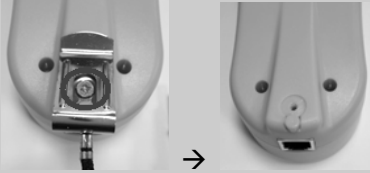

MT-8006B HOLSTER ASSEMBLY GUIDE

STEP	PICTURES	DESCRIPTION
1		Please unscrew and remove the clip and ABN before wearing holster.
2	 <p data-bbox="216 735 316 762">Top side</p> <p data-bbox="462 735 605 762">Bottom side</p>	Wear the holster from strap hole which is on the top side of butt set to the bottom side.
3		Push MT-8006B into the holster properly.
4		Adjust the holster to fix with butt set perfectly.
5		Assemble the clip and cable with butt set